



Zopkins

Specialist Camera Systems

Zopkins Universal Wi-Fi Bird Box Camera

Model: BBCAM202

Introduction

The Zopkins BBCAM202 is a universal WiFi bird box camera suitable for use in most bird boxes, hedgehog houses and other wildlife enclosures. It is supplied with custom designed 3D printed mounting brackets, giving flexible mounting options. 3D printed parts may show slight blemished and imperfections, this is normal and does not affect the structural integrity of the parts.

Important information

- The camera must only be powered using the power supply and cables supplied by Zopkins Ltd. Other power supplies / cables may cause irreversible damage to the camera. Contact Zopkins for replacement or additional parts / accessories.
- The camera and mains power supply are not waterproof and must be kept sheltered from the weather.

Mounting Instructions

1. If necessary, make a small hole or slot in the enclosure to allow the cable to pass through. It is recommended to make the slot / hole slope downwards towards the outside to make sure rain can't get in.
2. Decide where in the box you would like to mount the camera. Two brackets are supplied giving you the option to mount it at a right angle looking down, or on the lid of the box. Before fitting the camera check to make sure that the planned location will not interfere with the lid closing.
3. Example Installations:



4. Follow the connection guide on the reverse of this page

If you need any further help or technical support, please email our support team at support@zopkins.com

Connection Guide


Step 1. Download App

Get the **Tapo** app from the Apple App Store or Google Play, or by scanning the QR code below.




Step 3. Add Your Camera

Tap the + button, then 'Add Device', then 'Indoor Cameras', then **TC60**.

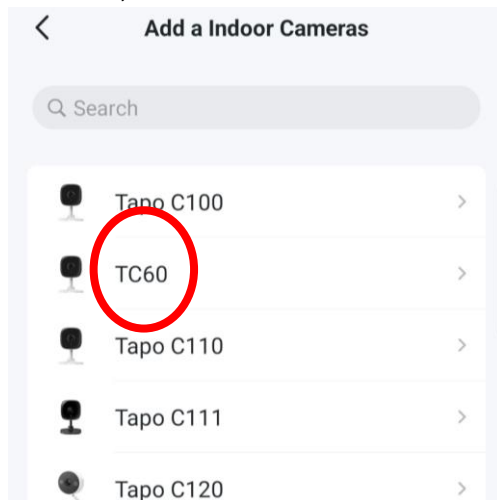

Step 2. Log In

Open the app and create a TP-Link ID account.

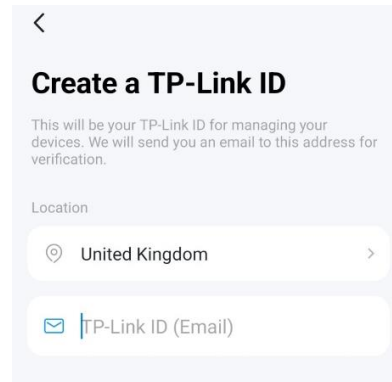

Step 4. Configure Camera

Follow the app instructions to configure your camera and add it to your home network.



Top Tips!

The Micro SD Card

The SD card has been fitted in the camera for you. When you first power it up it may state there is an issue with the card, this is normal. Simply follow the instructions in the app to initialize the SD card.

How to remove the 'Tapo' watermark?

Go to **settings** -> '**Advanced Settings**' -> '**On-screen Display Settings**' and switch off '**Display Logo**'.
(If the '**Display Logo**' setting is not visible, you may need to first update your camera)

Why is it asking me to pay for cloud storage?

The optional subscription allows you to store footage remotely in the cloud, however your camera includes a memory card to save footage to.
The subscription is completely optional and does not affect how the camera works. Simply tap the option in the top right to reject the subscription and continue.

LED Indication

Solid Red Starting up.	Blinking Red and Green Ready for setup.
Solid Green Connected to Wi-Fi.	Blinking Green Slowly Connecting to Wi-Fi.
Blinking Red Camera resetting.	Blinking Green Quickly Camera updating.